

Data Projection System

McIntyre 303

Main Power for the podium remains ON.
Computer and VCR are attached to the Data Projection System.
VCR is also connected to the TV.

Projector Remote Control is mounted on the podium.

TURNING ON PROJECTOR: Press ON button once.

The bulb takes a minute to warm up before responding. If you're unsure whether projector is on, look up at the projector lens to see if the light is on.

DELL COMPUTER:

- Turn on computer
- Select **#1** button on switcher.
- Adjust computer sound volume using controls on the upper right-hand of the remote. You may mute the sound using the **MUTE** button at the top center of the remote.

LAPTOP COMPUTER:

- Attach laptop cable bundle on shelf to laptop for projector and Internet access.
- Select **#2** button on switcher.

VCR:

ON PROJECTOR:

- Press **VIDEO 1** button on remote control to switch to VCR input.
- Adjust sound volume on data projector, using volume controls on remote control.

ON TV:

- Turn on TV, which should display VIDEO 1.
- If there is no picture, press **TV/VIDEO** button on TV until VIDEO 1 is displayed.

- Insert tape and press **PLAY**.

NOTE: If using projection system, press **DATA 1** on remote to switch back to computer input (shown as "RGB 1" on the screen) when finished.

TURNING OFF PROJECTOR: Press OFF button TWICE on the remote.

The first time asks if you are sure you want to turn it off.

You may blank the screen temporarily by pressing the **BLACK SCREEN** button on remote. Be sure to turn the picture back on by pressing the button again.

On EXTRON SWITCHER, select:

- #1 Dell Computer.
- #2 for Laptop connection. (Connect the cable first, and then turn on laptop.)

Getting Additional Help

For immediate help, call the OIS Helpdesk x8585.

For problems with tables, chairs, chalk, heating, lighting, etc., contact Facilities Services x3231.