

## Reference Sheet for Wyatt 203

You can always return to the MAIN MENU by touching the **MAIN** button at the bottom center of the LCD control screen.

### Touch the LCD CONTROL PANEL to turn it on.

If tapped lightly, the panel may sometimes beep without performing the action. Touch firmly so that it beeps *and* highlights the desired button.

#### VCR:

- Touch **PLAY A VIDEO CASSETTE** on the LCD panel.
- Turn VCR power on, and insert cassette tape. Playback will start automatically.
- Use LCD panel or remote to control VCR (e.g. stop, fast-forward, etc.).

#### DVD:

- Touch **PLAY A VIDEO CASSETTE** on the LCD panel.
- Turn VCR power on, and ensure input is set to LINE 1 using **CHANNEL** controls (continue until VCR displays "L1").
- Turn DVD power on, and insert DVD, VCD, or compatible media disc (see user's manual).
- Press **PLAY** when ready.

#### AUDIO (TAPE or CD):

- Touch **PLAY AN AUDIO CASSETTE OR CD** on the LCD panel.
- Turn on Denon audio player and insert CD or cassette tape.
- Choose **CAS** or **CD** on LCD panel, and use the controls there for audio playback.

#### MICROPHONE:

- Touch **JUST TALKING** on the LCD panel to use wireless mic.
- Adjust microphone volume using **VOC** button on LCD panel.

#### COMPUTERS:

- Touch **PROJECTION CONTROL** on the LCD panel.
- To use and project the Macintosh computer, touch the **MAC CMP** button. Ensure computer is on.
- To use and project the Dell computer, touch the **PC CMP** button. Ensure computer is on.
- To use and project a laptop you have connected to the bundle on the podium, touch the **LAP CMP** button. Turn on computer after connecting it.

When you are done, it is critical that you return to the MAIN MENU and select

## FINISHED PUT AWAY

TO ADJUST ROOM LIGHTING: Touch **ROOM** on the LCD panel, and use the **SCN** buttons lined up on the right. The top button is more lighting, and the bottom is less. You can shut off all the lights by touching **OFF**.

If it is not receiving a signal, the lamp in the data projector on the ceiling will turn off after ten minutes. To turn it back on, switch to a running device, and the signal will "wake up" the projector.

#### Getting Additional Help

For immediate help, call the OIS Helpdesk x8585.

For problems with tables, chairs, chalk, heating, lighting, etc., contact Facilities Services x3231.